



Archival Clamshell Box Assembly Instructions




pel
giving history a future

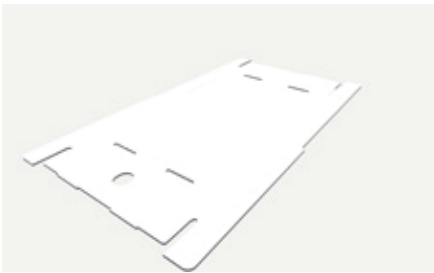


1. Place the box flat on a sturdy, clean, surface with the white inner side facing up.

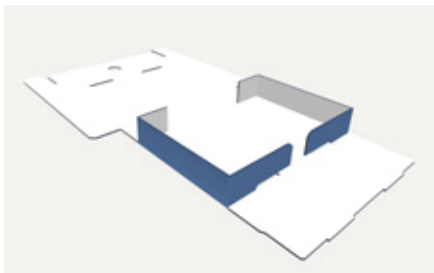


2. Following the pre-formed folds, fold the sides upward.

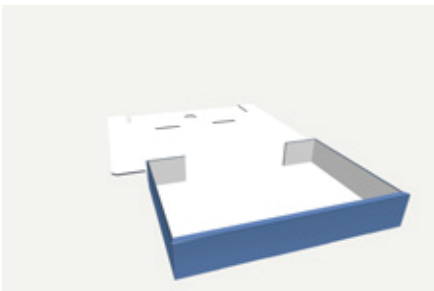


3. Fold the box front over the two supporting flaps and locate self-locking tabs into the pre-cut slits.

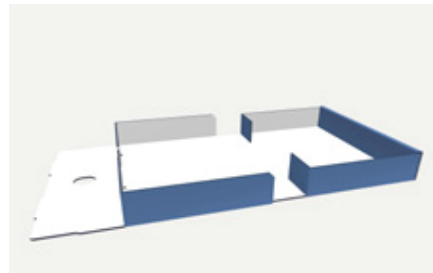

4. Again, following the pre-formed folds, fold the sides of the lid section upward

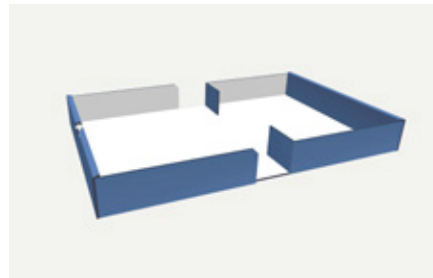

5. Fold the front of the lid section over the two supporting flaps and locate self-locking tabs into the pre-cut slits.

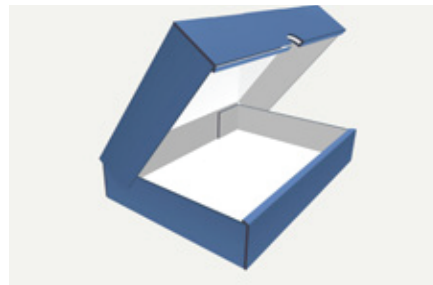

6. The completed box may initially be slightly stiff to operate, however the folds will relax with use.